



Crimp Termination for Flexible Cable

TNC Crimp Jack, Panel Type

		Hand Tool	See Appendix B
		Cable	RG58/U, 174/U
		Cable Assembly Instruction	See Appendix A Code E

TNC Bulkhead Crimp Jack

		Hand Tool	See Appendix B
		Cable	Mini Coaxial Cable, RG58/U, 174/U, 178/U, 316/U
		Cable Assembly Instruction	See Appendix A Code E

Bulkhead Receptacle, Solder Pot Terminal

TNC Bulkhead Jack

		Hand Tool	Nil
		Cable	Nil
		Mounting Hole	Refer to S-CONN's Drawing


TNC Bulkhead Jack, Isolated Type

		Hand Tool	Nil
		Cable	Nil
		Mounting Hole	Refer to S-CONN's Drawing

Clamp Termination for Flexible Cable

TNC Straight Clamp Plug

		Hand Tool	Nil
		Cable	RG8/U, 8/X, 58/U, 59/U, 213/U
		Cable Assembly Instruction	See Appendix A Code L

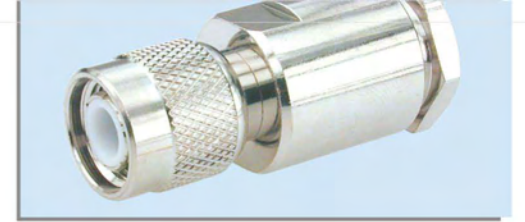

TNC Clamp Jack

		Hand Tool	Nil
		Cable	RG6/U, 58/U, 59/U
		Cable Assembly Instruction	See Appendix A Code L

Clamp Termination for Flexible Cable

TNC Bulkhead Clamp Plug

		Hand Tool	Nil
		Cable	RG174
		Cable Assembly Instruction	See Appendix A Code J

Printed Circuit Board Terminal Straight or R/A Terminal

TNC Bulkhead Jack (PBT Housing)

		Hand Tool	Nil
		Cable	Nil
		PCB Layout	Refer to S-CONN's Drawing

TNC Bulkhead R/A Jack (PBT Housing)

		Hand Tool	Nil
		Cable	Nil
		PCB Layout	Refer to S-CONN's Drawing

TNC Bulkhead R/A Jack (Metal Housing)

		Hand Tool	Nil
		Cable	Nil
		PCB Layout	Refer to S-CONN's Drawing



TNC Bulkhead Jack (Metal Housing)

		Hand Tool	Nil
		Cable	Nil
		PCB Layout	Refer to S-CONN's Drawing

TNC Bulkhead Jack, PCB Type

		Hand Tool	Nil
		Cable	Nil
		PCB Layout	Refer to S-CONN's Drawing

Panel Mount, Solder Pot Terminal

TNC Panel Type Jack Receptacle

		Hand Tool	Nil
		Cable	Nil
		Cable Assembly Instruction	Nil

Terminator & Cap

Protective Cap for TNC Jack

		Hand Tool	Nil
		Cable	Nil
		Cable Assembly Instruction	Nil

TNC Plug Terminator, 50R/75R/93R

		Hand Tool	Nil
		Cable	Nil
		Cable Assembly Instruction	Nil